


TAPS TO EXISTING MANHOLES SHALL BE MADE BY CORING AND USING A KOR-N-SEAL BOOT (OR APPROVED EQUAL).

INSTALL CONC. BENCH IN BOTTOM OF MANHOLE AS SHOWN TO EXISTING SEWER OUTLET

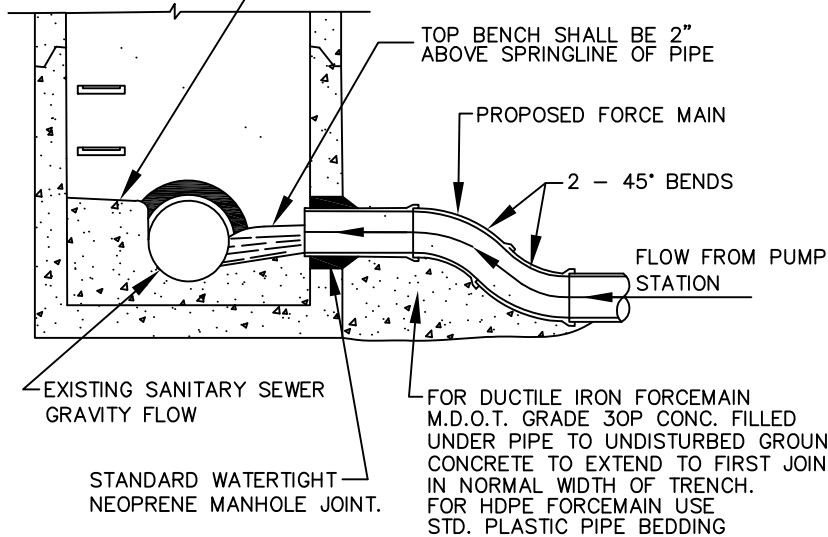

FORCEMAIN DISCHARGE TO GRAVITY SEWER MANHOLE

REVISION BLOCK

Parcel Base / Source Date: N/A

Rev. No.:	Rev. By:	Rev. Date:	Description:
1	Iz	07/12/02	ADDED NEW TITLE BLOCK
2			
3			
4			



FORCEMAIN DISCHARGE TO GRAVITY SEWER MANHOLE

ONE PUBLIC WORKS DRIVE, BLDG 95 WEST
WATERFORD, MICHIGAN
48328-1907

ORIG. DATE: 08/02/02
SCALE: NONE

SHEET: 1 of 1